



Kydera	Document No.: 202007200010-DR880UV
	Document Ver.: IAP-DR880UV-2.0
	Pages: 4

**DMR products upgrading description
(For designated use only)**

Draft dept.	R&D Dept.	Date	
Audit		Date	
Approve		Date	

Instructions for IAP upgrading steps

Processes:


1. Turn off the handheld, mobile radio or repeater firstly.
2. Connect the radio to the computer with Kydera special PC cable
3. Press and hold the [P2] button of the radio to power on to enter into upgrading mode, when LED keeps ON and related IAP reminder displays at the screen.

[P2] button as show below:



- when “IAP_A” displays at the screen, it indicates to upgrade Band A.
 - when “IAP_B” displays at the screen, it indicates to upgrade Band B.
4. Long press the programmable key [P2] for more than 3s to choose the desired upgrading band, which can be switched between band A and B.

5. Open IAP [] software

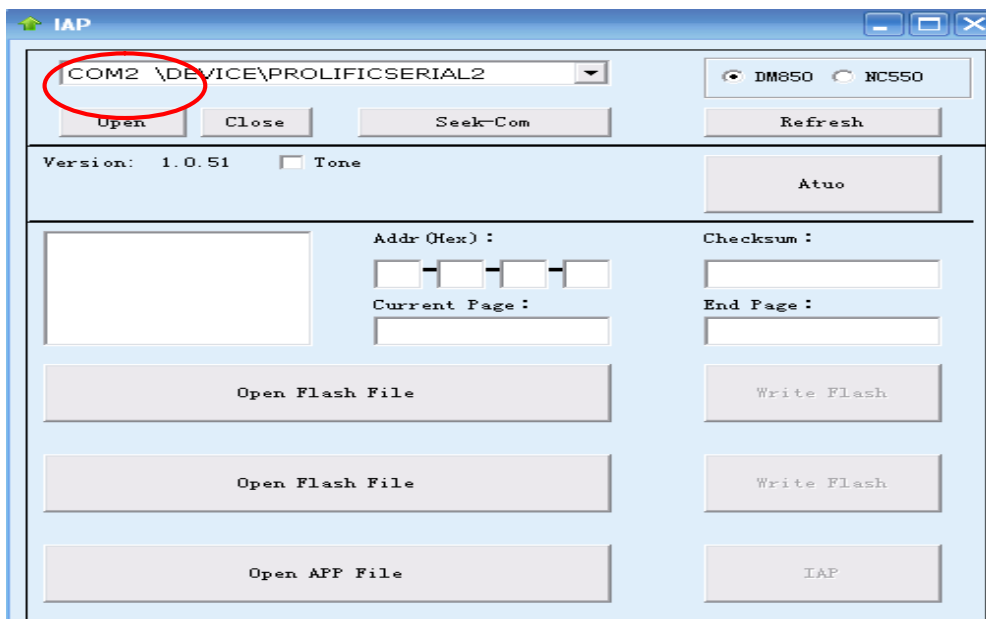


6. Click “Open” button to choose the right working comm. Port (can press “Seek-Com”

button to refresh till you find a workable one).

7. Click “Open APP file” to add the Upgrading file, and then click “IAP” button to start upgrading. In upgrading, please don’t operate the radio and make sure the radio is in normal power supply till the upgrade is finish.

Refer to below screenshot:

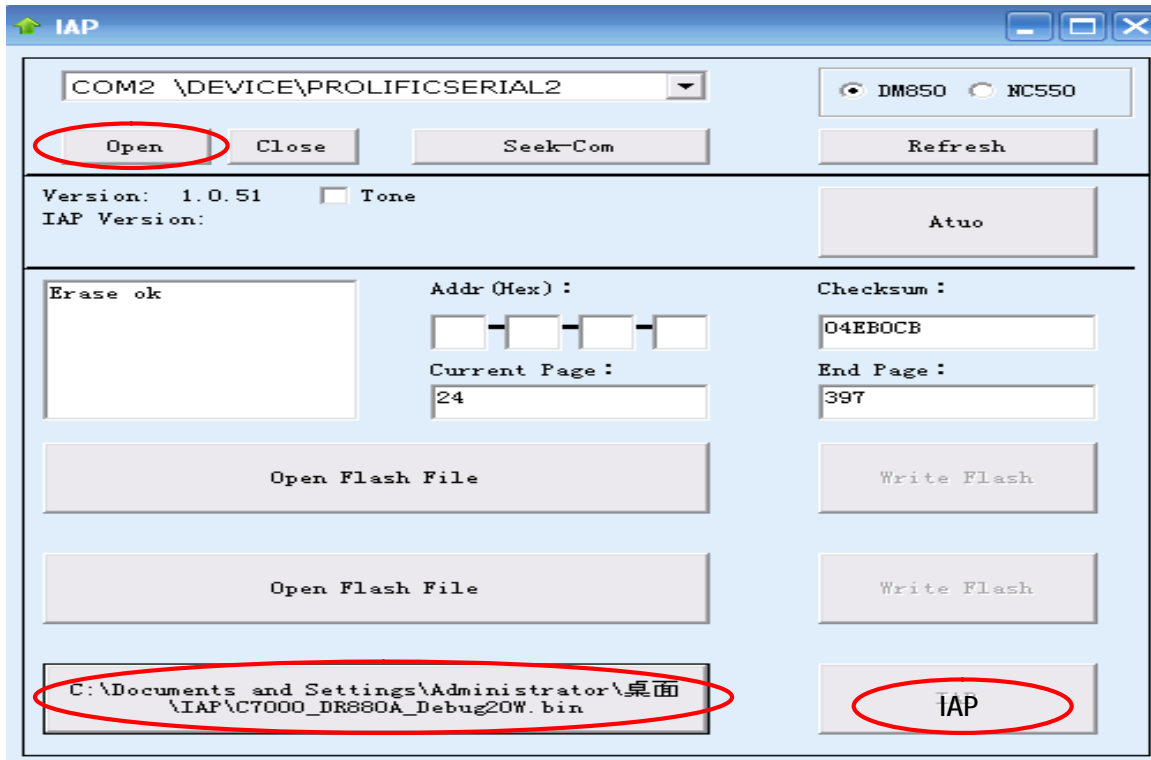

8. “IAP Checksum right” appearing on the left dialog box indicates the upgrading is successful.

9. Turn off the radio and re-power on it for normal working.

